# 2D Barcode Scanner **User Manual**

(Note: the barcode with \* is default setting)

### Connecting the Scanner

- 2. Plug the other special accessory cable joint to the PC

## **Default Configuration**



Auto-scanning mode OFF
Please decode by pressing the manual scanning mode OFF is the default.



## Auto-scanning mode ON

When the auto-scanning mode is ON, the scanner can decode by sensing the bar codes in front of the lens automatically







1

4















**Decoding Prompt Sound ON/OFF** 









3





### **Decoding Prompt Sound Volume**















































(5)



Code 39 Full ASCII

Code 32 (Need Code 39 ON)

UPC-A Check Bit

Convert UPC-A into EAN-13

**UPC-E Check Bit** 









9









UPC/EAN/JAN Supplement







10

13)





Code 128



11)

14)











(2) Damage caused by maintenance of non-professionals







12



Data Matrix







please check whether the cable joints are correctly connected or not

father to the bar code, the beam become wider. Therefore, to make quick precise read, please keep the scanner close to the bar code if it is small and keep the scanner far to the bar code if it is big.

Please do not stare at the screen of the scanner when it is at work, in case the strong beam



























